Return pressure spring installation

ERKO contact block 10,000 A | Steps 1 and 2


Step 1

Loosen or remove the screws and dowel pins.



Step 2

Use a tool to lift the return pressure springs slightly until the spring is relaxed.

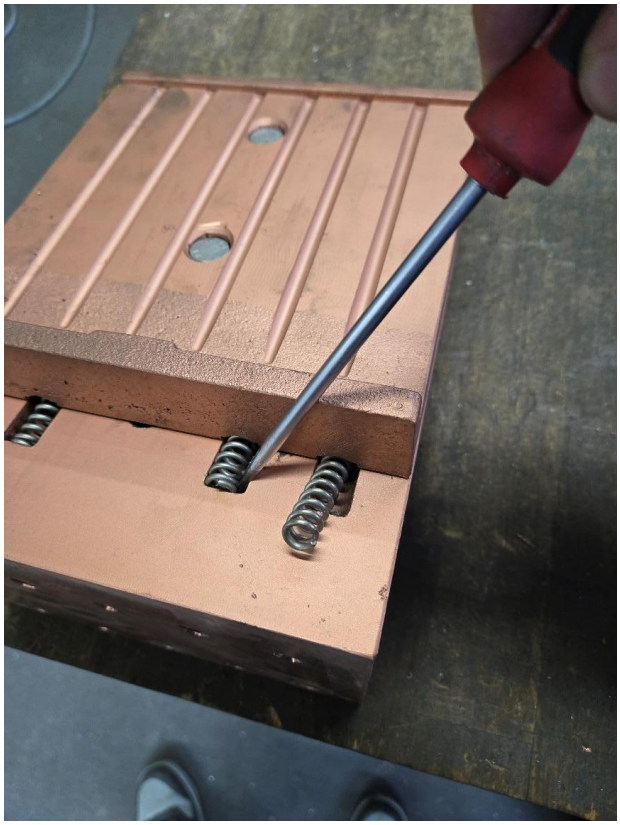

Return pressure spring installation

ERKO contact block 10,000 A | Steps 3 and 4

Step 3

Remove the screws, compression springs and the plate on the back.



Step 4

Remove the wedge slide and take out the return pressure springs.



Return pressure spring installation

ERKO contact block 10,000 A | Steps 5 and 6


Step 5

Install the wedge slide, compression springs and screws.



Step 6

Push the return pressure springs in as far as possible.

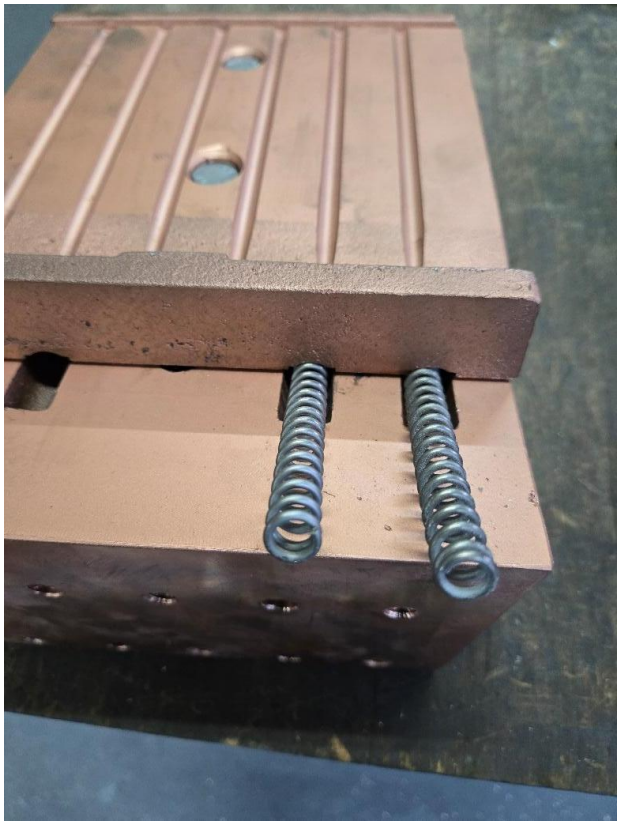


Return pressure spring installation

ERKO contact block 10,000 A | Steps 7 and 8

Step 7

Use a tool to press the return pressure springs inward so that they no longer pop out.

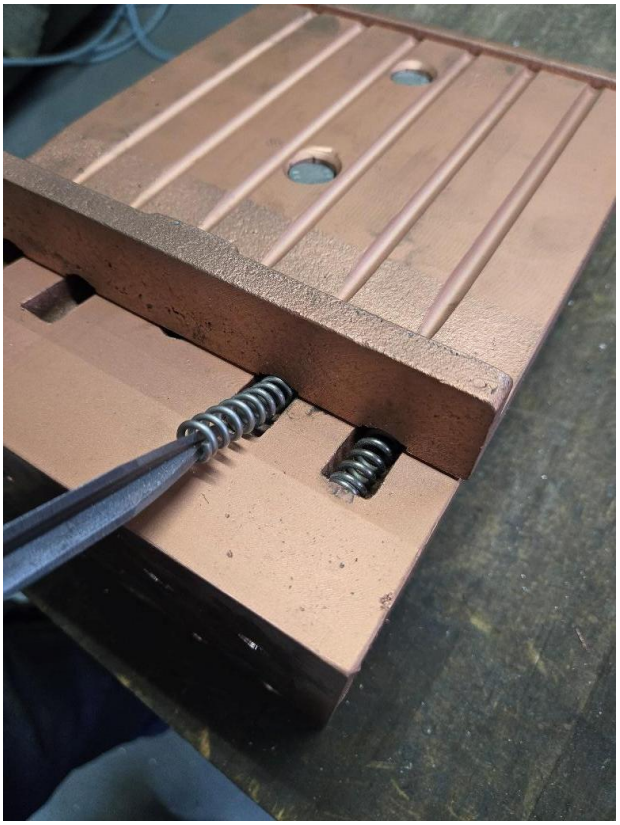

Step 8

If necessary, gently press the end or tap it with a soft hammer.



Step 9

Screw the contact block to the base plate. Make sure that the dowel pins do not protrude!